

Multifunctional Stopper

Read all directions carefully, prior to use the multifunctional stopper with a food waste disposer

Multifunctional stopper consists of one body with two seal rings.

One seal ring is covered outside the upper flange of body, another is covered the under flange of body.



Multifunctional Stopper

Multi-Function

a) Dish Scraper

The Multifunctional Stopper easily cleans food from plates, pans and dishes, scrape the food right into your disposer

b) Food Plunger

Now you can safely push food down into the disposer chamber without getting your hands dirty by using the multifunctional disposer tool

c) Cutlery Guard

When you are not using the multifunctional stopper, you can rest the upper ring on the sink flange to stop silverware and other small items from falling into the disposer, while still allowing the water to drain into the disposer

d) Sink Stopper

By pushing the multifunctional tool down to the upper ring, you can plug your sink

Do not operate your disposer with the multifunctional stopper in this position as you must have water running during disposal operation



Dish Scraper



Food Plunger



Cutlery Guard



Sink Stopper

Caution

Our company will be held harmless for damage or injury that is caused by product misuse or neglect.

Your food disposer should not be operated without removable splash guard under any circumstances

Use the multifunctional stopper while running your disposer without the splash guard and/or with multifunctional stopper in the plug/stopper position will cause damage to your multifunctional stopper and relieves the product and disposer manufacturers of all liability